



INSTRUCTION MANUAL

MULTI-FUNCTION SALAD MAKER

MODEL **MS460**



PRECAUTIONS

Before using this product, please read this instruction manual carefully and keep it in a safe place for future reference.

Safety Instruction

Suggestion

- Please read the instruction carefully before using the machine at the first time.
- In the absence of supervision, put the machine far away from the children.
Young children and the disability must use it under supervision.
- Please check the rated voltage of the machine is in accordance with the household supply voltage.






Any connection error will make warranty null and void.

- Your appliance is only suitable for using indoors.
- Please pull the plug, and then wash the machine after use.
- If the machine is damaged or does not work, please contact the service center.
- Do not immerse electrical appliances, wires and plugs into water or other liquids.
- Do not hang wires in a place where children can reach them.
- The power cord must be kept away from the heat source and sharp edges.
- For your safety, ONLY USE the parts we have equipped with the machine.
Do not use your fingers, and there is no fork, spoon, knife or any other tableware.
- The attachment can be removed when the appliance has a complete stop.
- Do not put any kitchen ware (spoon, shovel, ...) into the glass bowl.
- Accessories should be used in turn.
- Handle the metal blade and disk carefully: they are very sharp.
- The blade must be removed before emptying the residue of the glass.
- Do not touch parts when moving.
- Do not operate your electric machine at no load.
- If the power cord is damaged, it must be replaced by the manufacturer, its service

agent or similar person to avoid danger.

- This appliance is not intended to be used by the persons(including children) who is reduce physical, sensory or mental abilities, or lack of experience and knowledge unless they have been responsible for the supervision or guidance of the use of the appliance for their safety.
- Children should be supervised to ensure that they do not play with electrical machine.
- To disconnect the power adapter if no one is assembling, disassembling or cleaning.
- Children are not allowed to use unsupervised equipment.
- Handle blade, glass should be careful when cleaning.

Product breakdown

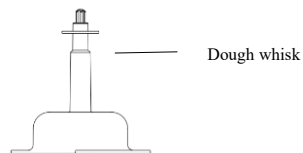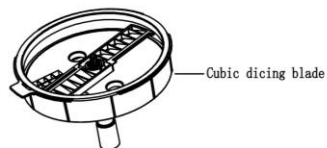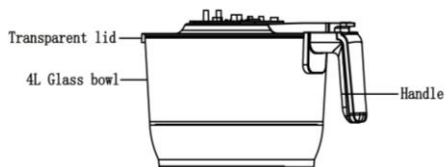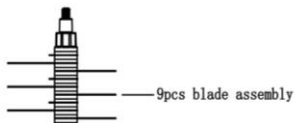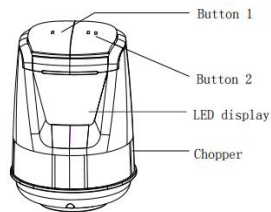

Use product

1. Before use, follow the cleaning and maintenance instructions to clean the glass cup, cubic, slicer and shred blade disc, bowl lid and other accessories.
2. Place the clean glass cups on the base and put them on the flat.
3. Select the appropriate blade or accessory according to your needs and place it on the central rotating shaft at the bottom of the chopping bowl and fix it.
4. Plug in the power cord plug and connect the power supply.
5. Hold the machine body with your hand, press the button to start working, and release the button to stop the machine.

Note: To extend the product's service life, the maximum working time for processing food with the shredding blade at one time should not exceed 30 seconds, and for processing food with the blade disc at one time, it should not exceed 1 minute. If the processing effect is not achieved within the above time, please let the product rest for 2 minutes before continuing to work.

6. After the machine stops, please do not remove the body immediately. Wait until the blade stops rotating, then unplug it, switch on a new power supply, and remove the upper cover.
7. After removing the lid from the bowl, take out the blade assembly first and then the food. The blade is extremely sharp. When removing the blade and other cutter discs and cleaning them, should be very careful.
8. After use, unplug the power cord and remove the blade assembly.

Cleaning

1. After use, please unplug the power plug from the power socket.
2. The chopping blader should be disassembled and cleaned separately. Clean the blade with a soft cloth. For safety, it is recommended to wear gloves to avoid touching the blade. Disassemble the chopping blade or other blade disc assembly according to the left figure.
3. After washing and drying, the assembly can be done. The blade should be covered with a blade sleeve to avoid touching the blade and cutting the hand carefully.
4. Clean the blade disc by rinsing it with clean water or wiping both sides with a soft cloth. For safety, wear gloves to avoid touching the blade.
5. Glass cups, bowl lids and other parts can be cleaned with dishwashing detergent and sponge. Do not use hard steel wire to clean to avoid damage to the surface.
6. Do not immerse the whole machine in water. The outer surface of the main engine can only be wiped with a wet towel, and do not wash with water to avoid leakage accidents. Only the cover can be washed, and do not immerse it in water.
7. When the product is not used for a long time, please clean it, put it into the packing box, and put it in a dry and ventilated place to avoid moisture and affect the use.
8. All accessories are machine washable.
9. Wash with water and detergent. Handle stainless steel blades with care to avoid injury.

Save and preserve

Assemble the product and place the power supply on the plastic bag.

Processing Guide

Food	Max capacity	Running period	Preparation
The attached recipe for the 9pcs chopping blade as follows:			
Meat	800g	30s	Remove the bones, fat and cartilage and cut into 1-2cm pieces
Beef	800g	30s	Remove the bones, fat and cartilage and cut into 1-2cm pieces
Carrot	500g	15s	Cut into 2cm pieces
The attached recipe for the slicer and shred blade disc as follows:			
Carrot	500g	60s	Place the proper size food into feed tube
Potato	500g	60s	Place the proper size food into feed tube
Cucumber	500g	60s	Place the proper size food into feed tube
The attached recipe for the cubic blade disc as follows:			
Carrot	500g	60s	Place the proper size food into feed tube
Potato	500g	60s	Place the proper size food into feed tube
Cucumber	500g	60s	Place the proper size food into feed tube
The attached recipe for the dough whisk as follows:			
Flour	500g	3mins	The ratio of flour to water is 1:0.72

For Your Attention :

-Do not disassemble the blade assembly and store it in the glass bowl. Improper operation may seriously damage the product.

What should you do if your appliances are not working?

check up :

Check if the power supply is properly connected.

Check if the host is properly installed in the slot on the glass cup lid.

-Is the installation correct?

Your appliance still isn't working?

Instruction **MANUAL**



MEGA delivers high-quality, durable kitchen & home products designed for top performance. Visit our website for Info & more.



**MEGA TECHNOLOGY
UNITED KINGDOM**

WWW.MEGAMEETUK.COM