



INSTRUCTION MANUAL

VITAMIN PLUS SLOW JUICER

MODEL **MSJ217**



ABOUT

Every detail of this product embodies our dedication and innovation. From materials to design, from functionality to aesthetics, we strive for perfection to deliver the best kitchen experience to you. We believe it not only meets your daily cooking needs but also becomes a beautiful highlight in your kitchen.

Thank you for your trust and support in choosing our product. We deeply appreciate the recognition behind this trust, which serves as our greatest motivation to keep moving forward. We promise to continue working hard, innovating constantly, and providing you with more high-quality products and services.

May our product shine in your kitchen and bring you joy in your life. Once again, thank you for choosing us, and we look forward to creating more wonderful moments together in the future.

Table of Contents

Product Components..... 01

Instructions for Use..... 02

Operating Instructions..... 03

Control Knob..... 05

Safety Precautions..... 06


Materials for Food Contact..... 10

Troubleshooting..... 11

How to clean..... 12

Warranty..... 13

 
Product Components

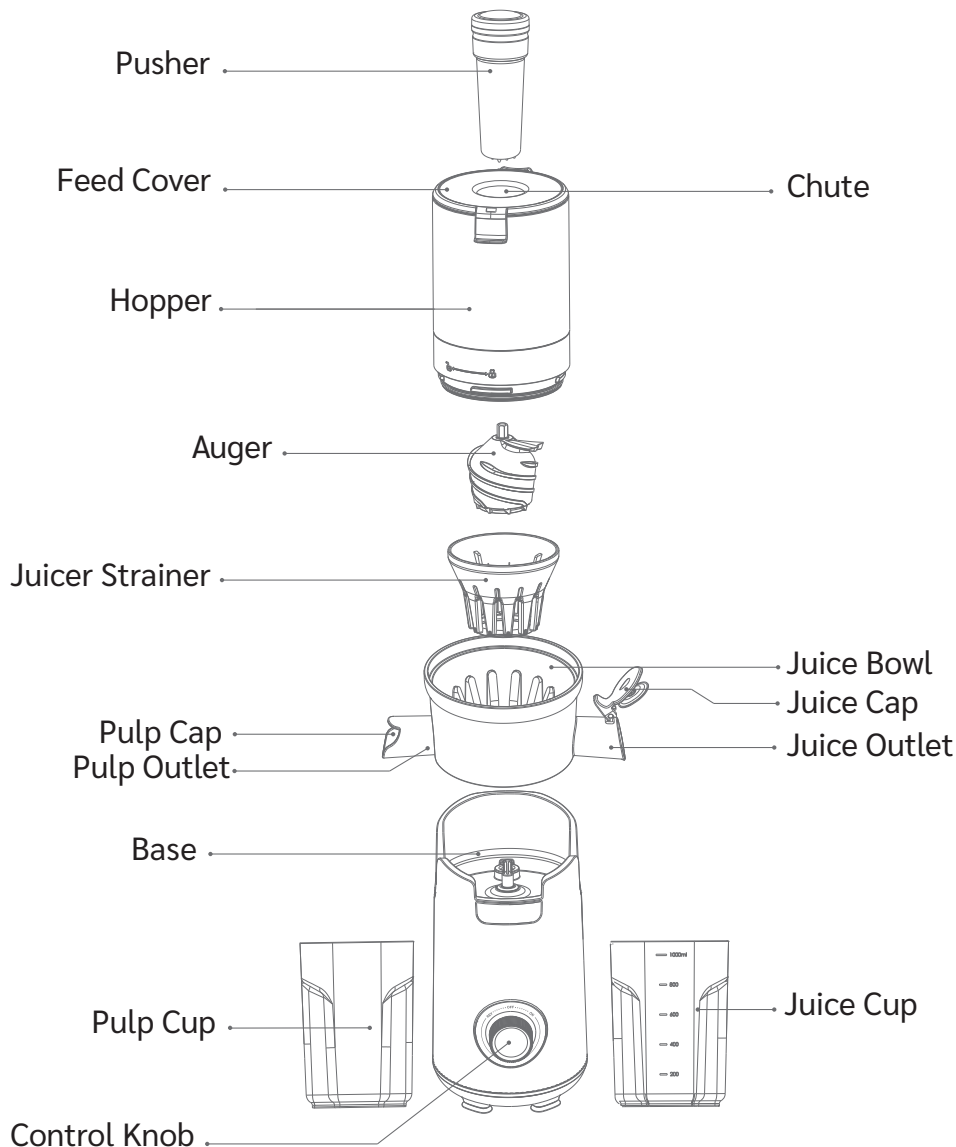


Instructions for Use

1. Make sure to place the product on a steady countertop and avoid setting it on a wet or slippery surface.
2. Pay close attention to the following when preparing ingredients:
 - For stone fruits like plums, lemons, peaches, and lychees, remove the pits before juicing.
 - Fruits with skins such as oranges, tangerines, grapefruits, lemons, watermelons, and cantaloupes should be peeled before juicing.
 - The machine is capable of juicing citrus fruits with their peels on. However, the peels may alter the flavor of the juice. Remove the peels before juicing is better for the flavor of the juice and for optimal juice extraction.
 - Vegetables with high fiber content like celery and parsley should be cut into small pieces of 3-4 cm before juicing.
 - Avoid juicing ingredients like sesame seeds, peas, bark, and Sichuan pepper that cannot be cold-pressed.
 - Avoid juicing preserved fruits (like grapes, raspberries, mulberries) and enzymes (such as clover, pine needles) soaked in alcohol, honey, sugar, etc.
 - Do not use the juicer for grinding grains and nuts or juicing tough items like sugarcane and coconuts. Also, refrain from pressing ice cubes.Thaw frozen ingredients before juicing to prevent damage to the product.
3. When inserting ingredients, if any ingredient gets stuck in the hopper, please use the provided pusher to press it down. Do not use fingers, spoons, chopsticks, or other objects to press the ingredients to avoid personal injury and damage to the product.
4. Some parts may become stained after juicing certain ingredients, which is a normal phenomenon.
5. Drink the juice as soon as possible and avoid storing it for a long time.

 Operating Instructions

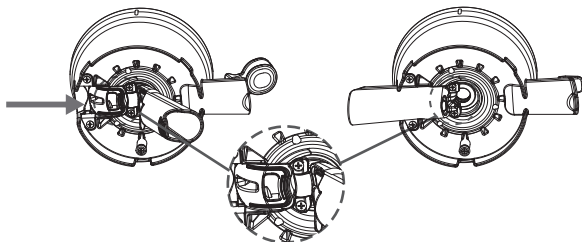

 
1. Button up the pulp lock on the bottom of the juice bowl as shown in left.

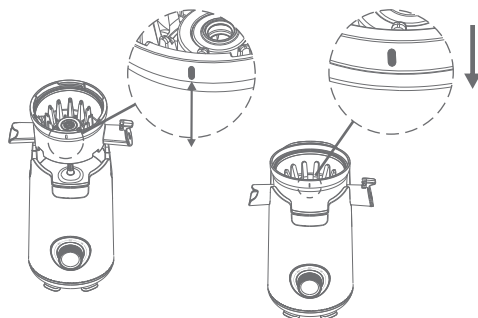

Step 1

The  mark on the juicing bowl facing forward.



Align the  mark on the juicing bowl with the  mark on the base.

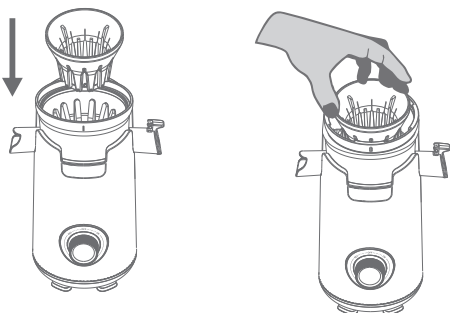

Step 2

Place the juice strainer into the juice bowl, and insert it until it fits snugly in the bottom of the juice bowl.

Operating Instructions

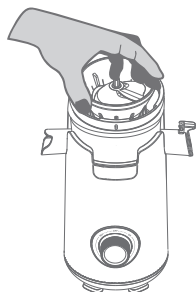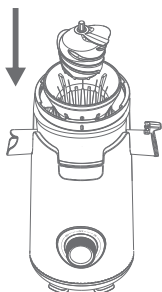


Step 3


Insert the auger into the juice strainer and twist it clockwise and counterclockwise to fully assemble it into place.

First, open the feeding cover on top of the hopper, then rotate the hopper clockwise and lock it into the juice bowl. Align the  mark on the juice bowl with the  mark on the hopper.

Please ensure that the feed cover is open before assembly or disassembly

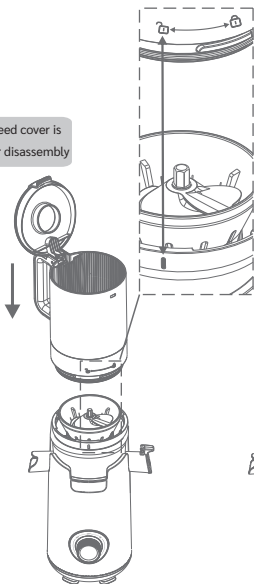


Please ensure that the  mark is aligned with the  mark on the hopper before start juicing

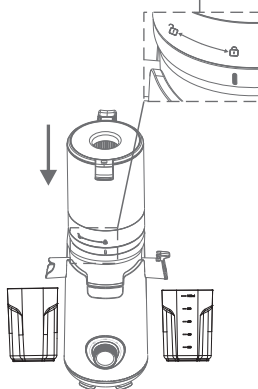

Control Knob

Make sure the control knob is turned to the OFF position before juicing

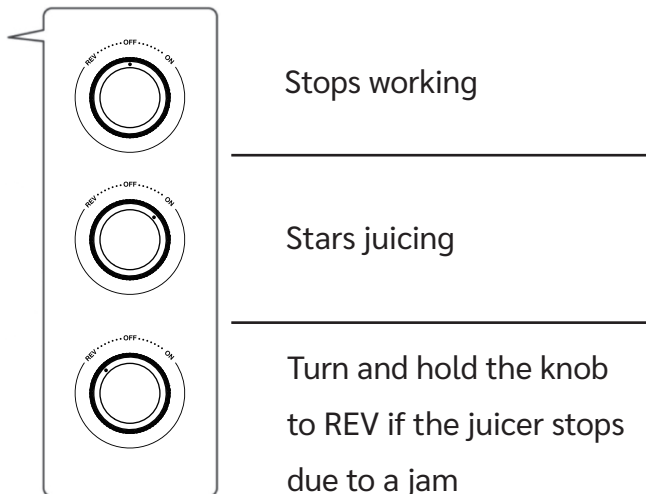

1. Before juicing, make sure the pulp and juice cup are correctly positioned.
2. Turn the knob clockwise to the "ON" mode to start juicing.
3. The top feeding chute on the feeding cover can be used to directly insert small-sized ingredients. Then, use the pusher to gently push the ingredients. (Note: Do not insert hard ingredients such as coconut and sugarcane. For ingredients like lemons, grapefruits, oranges, grapes, watermelons, and cantaloupes, remove the peel and pits.) If the juicer gets clogged during the juicing process, you can rotate the knob counterclockwise to the "Reverse" mode for 3-5 seconds, and then rotate it back to the "ON" mode.

Safety Precautions

1. Caution

To prevent injuries and property damage to yourself and others, please adhere to the following safety precautions. Failure to comply with safety warnings may result in accidents.

2. Note:

This product does not consider the following scenarios: unsupervised use by infants and disabled individuals, and children playing with the appliance.

Content marked as [Prohibited]:

1. This product is intended for household use only and is prohibited for commercial purposes.
2. It is prohibited to use inferior plug sockets and prohibit children from operating the appliance.
3. Keep the product away from flammable materials. When using, keep it away from curtains, drapes, curtain walls, or similar items to prevent fire hazards.
4. To prevent the risk of electric shock, do not immerse the machine or its components in water or other liquids.
5. When the machine is not in use, before installing or removing components, and before cleaning, unplug the power plug from the socket.
6. Do not modify: Except for maintenance technicians, no one else should disassemble or repair the machine to avoid fire, electric shock, or injury.
7. Do not use voltages other than 220V to prevent fire or electric shock.
8. Do not use the power cord plug or wiring if it is damaged.

Safety Precautions

9. The appliance should not be operated with an external timer or an independent remote control system.

When inserting food ingredients, if any ingredients get stuck in the feeding chute, please use the supplied pusher to push them down. Do not use fingers, spoons, chopsticks, or any other objects to press the ingredients to avoid personal injury and damage to the product.

Items marked as [Warning] that can cause harm or injury to individuals:

1. Individuals with pacemakers, hearing aids, or cochlear implants should consult authorized medical personnel and refer to the instructions provided with medical devices before using this product.

2. Do not place fingers or other hard objects into the machine while it is in operation to prevent personal injury from moving parts.

3. Be careful not to let ties, necklaces, scarves, hair, or other items get entangled in the feeding chute, as it may cause personal injury, machine malfunctions, or damage.

4. After each use, ensure that the machine is turned off. Before disassembling the machine, make sure the motor has completely stopped to prevent personal injury from moving parts.

5. When the product is not in use or when going out, be sure to unplug the power cord to prevent malfunctions or hazards.

Safety Precautions

6. Do not operate the power cord in a way that may cause damage, fire, or electric shock, such as forcefully bending the power cord, placing it near high temperatures, or carrying heavy objects.
7. It is prohibited to move or shake the product during operation.
8. Do not allow children to operate the product alone. Keep it out of reach of infants and young children to prevent electrical shock or accidents caused by touching the juicing components.
9. Do not insert pins, wires, or other objects into the exhaust vents at the bottom of the product to avoid the risk of electric shock.

Content marked as [Mandatory]:

1. The appliance must not be immersed in water or exposed to water.
2. This product is for indoor use only.
3. If the power cord plug is dusty or has water stains, clean it promptly to prevent fire, electric shock, or short circuits.
4. If you need to repair or replace parts of the product, please go to designated professional repair centers to avoid safety hazards caused by improper repairs or the use of improper parts.
5. The plug must be fully inserted into the socket to prevent fire, electric shock, or short circuits.
6. Do not unplug the power cord with wet hands to avoid electric shock or injury.
7. If the power cord is damaged, it must be replaced by a professional from the manufacturer, authorized repair department, or similar service provider to avoid hazards.

Safety Precautions

Items marked as [Caution] may cause minor injuries or property damage:

The product must be used on a stable and dry countertop to prevent product damage or accidents.

Improper repair or unauthorized short-circuiting of certain important components, such as fuses, may cause the product's protection to fail, resulting in overheating or fire.

Content marked as [Warm Reminder]:

1. If the product image differs from the actual product, refer to the physical product.
2. Do not let the machine working for a long time before adding any food ingredients.
3. Before operating the product, check if the juice cup, feeding chute, juicer, and spiral press are securely in place to avoid personal injury or machine malfunctions.
4. If there are abnormal noises, excessive heat, or smoke during use, stop using it immediately and contact the service department.
5. Do not use continuously for more than 30 minutes. After continuous use, allow a 15-minute break before using it again. If the motor overheats, the overheating protection may not work until the machine cools down.

Materials for Food Contact

This product is suitable for food contact. Please use this product as instructed in the manual. The food contact materials and components of this product comply with the relevant national food standards.

The specific information is as follows:

Component Name	Material
Feeding Cover, Juice Cap, Pulp Cap	ABS
Pusher	PP
Juice Cup, Pulp Cup	AS (Note: Temperature not exceeding 60℃)
Sealing Silicone	Silicone Rubber
Juice Strainer	POM

Troubleshooting

JUICER DOES NOT WORK

- The motor might stop working if it gets too hot from running continuously for 30 minutes or more. It'll start working again once it cools down.
- Check if the hopper is installed properly onto the juicing bowl.

Ensure the mark on the hopper is aligned with the mark on the juicing bowl.

Please check page 4.

- Check if the juice bowl is installed properly onto the base. Ensure the mark on the juice bowl is aligned with the mark on the base. Please check page 4.
- Ensure the feeder cover is completely closed before juicing.

THE PRODUCT SUDDENLY STOPS RUNNING

- Make sure the hopper lid hasn't opened during operation because safety sensors will stop the machine if the hopper lid is open.
- Check if any ingredients are too big or stuck together, preventing the processing blade or auger from turning. Sometimes, hard ingredients like carrots, beets, or celery can jam the processing blade. Try turning the control knob to REV for at least 5 seconds and then back to ON. You might need to repeat this 3-4 times to clear the jam.

IF JUICE LEAKS BETWEEN THE HOPPER AND THE JUICER BOWL

- Check to ensure the juice cap is completely opened.

IF AN UNUSUAL NOISE IS HEARD WHILE JUICING

- Sometimes, you might hear unusual sounds while juicing certain ingredients like apples, carrots, celery, or beets. It's normal and nothing to worry about.

How to Clean

1. Before cleaning, make sure to unplug the power and let the main unit cool down completely.
2. Never rinse the base with water or submerge it directly. Use a damp soft cloth to wipe it clean, and then use a dry cloth to remove any water stains.
3. Removable parts such as the pulp cup, juice cup, pusher, hopper, juice bowl strainer, and auger can be cleaned by immersing them in water. If there's leftover pulp in the pulp outlet of the juice cup, open the residue cover and use the provided cleaning brush to clean the outlet, then rinse with water.
4. The processing blade inside the feeding chute are sharp. Be extra careful when cleaning and avoid direct contact with the food crushing blade to prevent cuts.
5. Removable parts like the juice cup and pulp cup must not be sterilized or cleaned at high temperatures, as this may cause deformation. Use warm water with a moderate amount of detergent and a soft cloth to wash them.
6. After cleaning all parts of the machine, thoroughly dry them with a cloth and reinstall the removable parts in their original positions.
7. If not used for a long time, store the juicer in a dry and well-ventilated place.
8. All parts of the machine, with the exception of the motor, are suitable for dishwasher cleaning. Just disassemble the parts before loading them into the dishwasher to ensure a clean and hygienic result.

Instruction **MANUAL**



MEGA delivers high-quality, durable kitchen & home products designed for top performance. Visit our website for Info & more.



**MEGA TECHNOLOGY
UNITED KINGDOM**

WWW.MEGAMEETUK.COM